

INSTALLATION AND USER'S MANUAL



VP-WH900SSB

CONTENT

INTRODUCTION.....3

SAFETY PRECAUTION.....3-5

WALL MOUNTING INSTALLATION.....6

 PREPARE FOR INSTALLATION.....6

 INSTALLATION (VENT OUTSIDE).....7-9

 INSTALLATION (VENT INSIDE).....10

OPERATION.....11

MAINTENANCE.....13

TROUBLESHOOTING.....14

ENVIRONMENTAL PROTECTION.....14

INTRODUCTION

Thank you for choosing this cooker hood.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage.

The cooker hood uses high quality materials, and is made with a streamlined design. Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.

SAFETY PRECAUTION

- ☐ Never let the children operate the machine.
- ☐ The cooker hood is for home use only, not suitable for barbecue, roast shop and other commercial purpose.
- ☐ The cooker hood and its filter should be cleaned regularly in order to keep in good working condition.
- ☐ Clean the cooker hood according to the instruction manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- ☐ Forbid the direct baking from the gas cooker.
- ☐ **Please keep the kitchen room a good convection.**
- ☐ Before connecting this appliance check that the power supply cord is not damaged. A damaged supply cord must be replaced by qualified service personnel only.
- ☐ **There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels;**
- ☐ **The air must not be discharged into a flue that is used for exhausting fumes from appliances**

burning gas or other fuels;

- Regulations concerning the discharge of air have to be fulfilled.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person solely for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not flame under the range hood.
- **CAUTION: Accessible parts may become hot when used with cooking appliance.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


Electrical Shock Hazard

- Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified engineer.
- Failure to follow these instructions can result in death, fire, or electrical shock.


WALL MOUNTING INSTALLATION

1. Prepare for installation:


- a. If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or inflammable material with an interior diameter of 150mm)

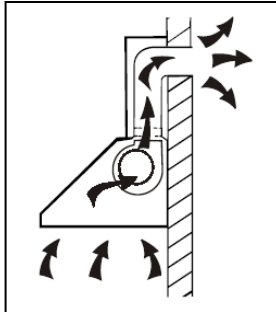

- b. Before installation, turn the unit off and unplug it from the outlet.

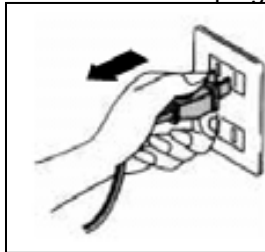

- c. The cooker hood should be placed at a distance of 65~75cm above the cooking plane for best effect.

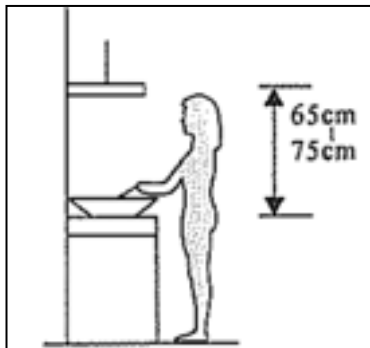


2. Installation (Vent outside):

Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room.


Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards

When the range hood and appliance supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must be not exceed 4 Pa (4×10^{-5} Bar)


- Drill 3 x 8mm holes to accommodate the bracket. Screw and tighten the bracket onto the wall with the screws & screw plugs provided.

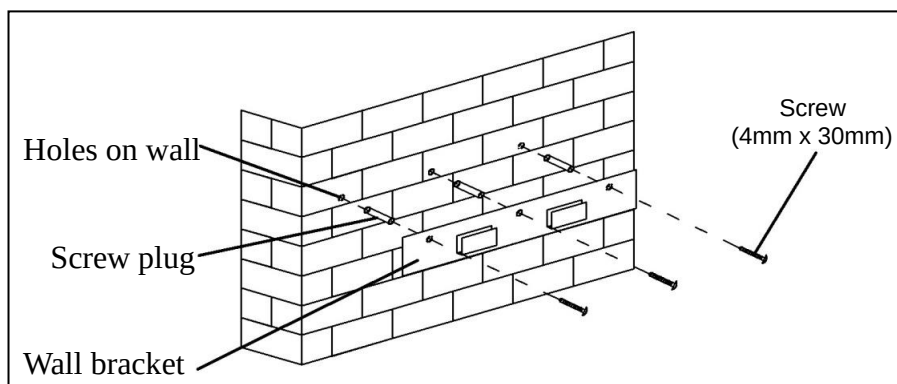

- Leave up the cooker hood and hang onto the wall bracket hook.

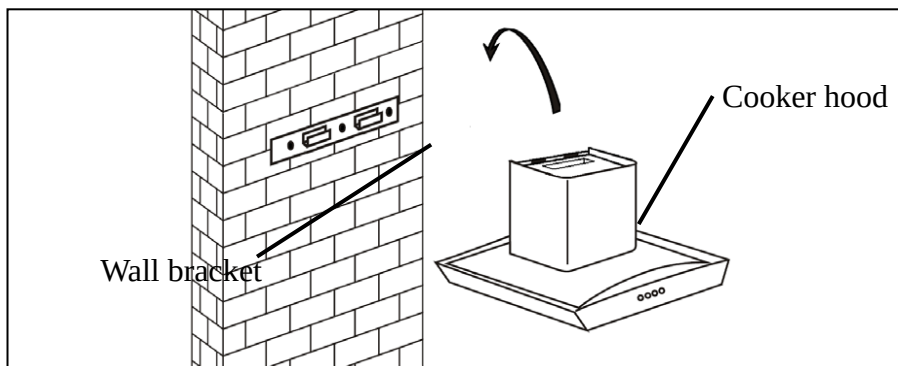


- Fix the one-way-valve to the air outlet of the cooker hood. Then, attached the exhaust pipe onto the one-way-valve as shown below.

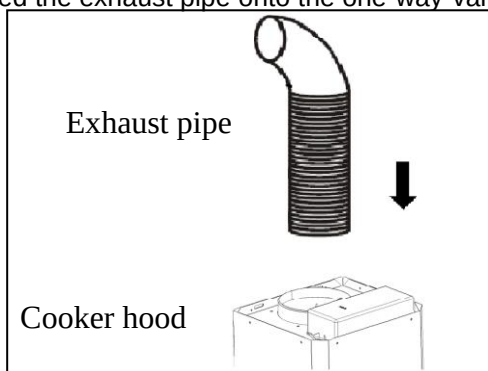


- Chimney installation.


- ◆ By Put the upper chimney into lower chimney .Then pulling out the upper chimney upwards. Adjust to reach the height required.

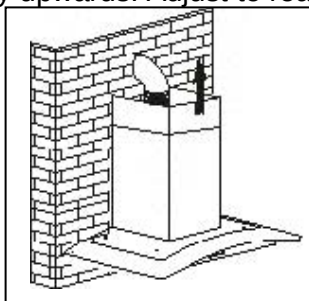

- ◆ Sliding the chimney to adjust the chimney height. When the height you required is reached, then hang the fixing hole to the fixing screws as showed in below pictures.

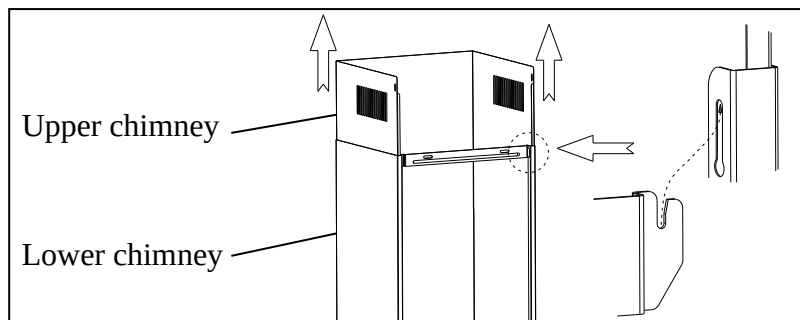


- ◆ Drill $2 \times 8\text{mm}$ holes to accommodate the plate II. Screw and tighten the plate II onto the wall with 2 screws provided. Assembly the chimney onto the unit and fix it with 2 screws.

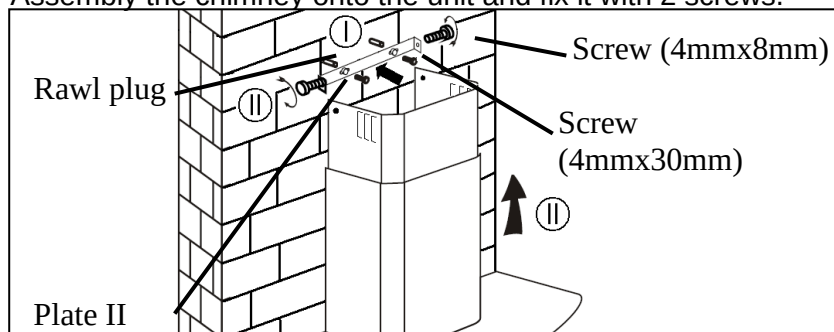


Installation (Vent inside)

If you do not have an outlet to the outside, exhaust pipe is not required and the installation is similar to the one show in section “**Installation (Vent outside)**”.

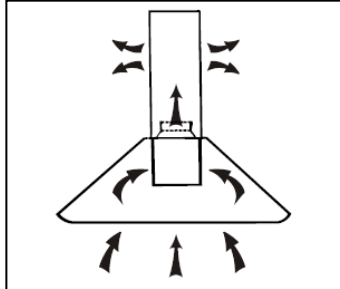


Activated carbon filter can be used to trap odors.

In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.

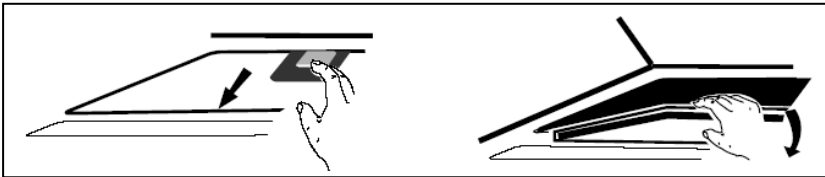

Plug the activated carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.

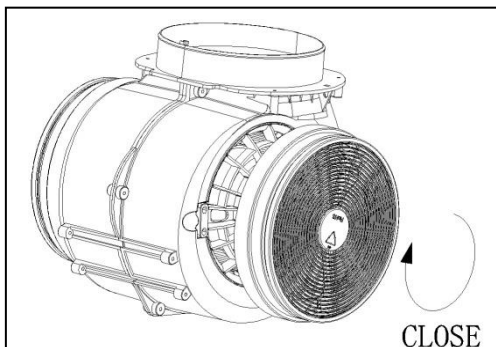

NOTE:

- *Make sure the filter is securely locked. Otherwise, it would loosen and cause dangerous.*
- *When activated carbon filter attached, the suction power will be lower.*

OPERATION

Touch control



 **On/Off button**– Depress this button to turn on/off the motor

Speed –select speed to suit cooking conditions

- 1** Low –Depress this button to enter into low speed and again to turn off motor.
- 2** Medium –Depress this button to enter into medium speed and again to turn off motor
- 3** High –Depress this button to enter into high speed and again to turn off motor

 **Lamp** – Turn on/off light

Technical data sheet

TECHNICAL DATA*			
Type	Wall mounted Cooker hood		
Material	Stainless steel + Glass		
Installation-width in cm	90.00		
Wall mounted installation	✓		
Control Type	Touch		
Recirculation	Optional		
Annual energy consumption (AEC _{hood})	55.5 kW/h		
Energy efficiency category	B		
Fluid dynamical efficiency (FDE _{hood})	24.4		
Fluid dynamical efficiency category	B		
Lighting efficiency (LE _{hood})	34.0 lux/W		
Lighting efficiency category	A		
Grease separation	93 %		
Grease separation category	B		
Air flow **	351.5 m³/h	601.7 m³/h	
Maximum air flow Qmax	601.7 m³/h		
Air flow at boost setting	N/A		
A-rated noise emission **	55 dB	72 dB	
Power consumption off (P _o)	0.49 W		
Power consumption standby (P _s)	0.44W		
Power consumption lighting system (W _l)	3.0 W		
Connected load	193W		
Illuminant	✓ / LED		
Power consumption per illuminant unit	2*1.5 W		
Voltage / frequency	220 - 240 V AC / 50 Hz		
Height adjustment in cm	54.8-100		
Grease filter / material / dishwasher-proof	3	aluminium	✓
Carbon filter ***	optional		
Installation material	✓		
Instruction manual	✓		
Dimensions appliance H*W*D in cm	54.8-100*50.00*90.00		
Weight net / gross in kg	15.00 / 17.0 0		

MAINTENANCE

Before cleaning switch, the unit off and pull out the plug.

I. Regular Cleaning

Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

II. Monthly Cleaning for Grease Filter

ESSENTIAL: Clean the filter every month can prevent any risk of fire.


The filter collects grease, smoke and dust..... so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

III. Annual Cleaning for Activated Carbon Filter

Apply SOLELY to unit that installed as a recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood used.

IV. Bulb Replacement

- 1.Switch the unit off and unplug the appliance.
- 2.Remove the Alum filters
- 3.Replace with the same type and rated bulb/lamp
 - LED lamp (max,1.5W).

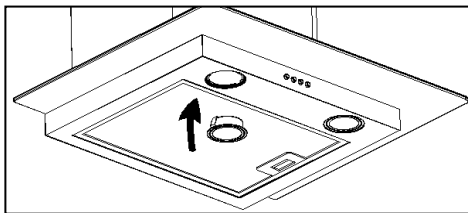

TROUBLESHOOTING

Fault	Cause	Solution
Light on, but fan does not work	The fan blade is jammed.	Switch of the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	light bulb burn.	Replace the bulb with correct rating.
	Power cord looses.	Plug in to the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch of the unit and repair by qualified service personnel only.
	The fan motor is not fixed tightly.	Switch of the unit and repair by qualified service personnel only.
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too long distance between the unit and the cooking plane	Readjust the distance to 65-75cm

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This appliance is marked according to the European directive 2012/19/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the pro

